




Changing the Channel of eInstruction CPS Gen2 Response Pads

1. Simultaneously press both of the arrow keys    once.

2. Press the  button.

NOTE: If **SMA** or **TMA** appears on the screen, turn the pad off and repeat the process from the beginning.


3. ****Channel:** Enter the **NEW** two-digit channel number.


4. Push .

5. ****Address:** Enter the pad number.

6. Push .

NOTE: If the channel and clicker # are already correct, you do not have to enter them again.

Simply press  to retain the current information.

7. Press  one additional time and the response pad will power down.

