









## Changing the Channel of eInstruction CPS Pulse Response Pads

1. Turn the response pad **ON** by pressing .
2. Simultaneously press both of the arrow keys    once.
3. Press the  button.

**NOTE:** If **Channel** does not appear on the screen, repeat steps #2 and #3 until it does.

4. **\*\*Channel:** Enter the **NEW** two-digit channel number.
5. Push .
6. **\*\*Clicker #:** Enter the pad number found on the front of the response pad.
7. Push .

**NOTE:** If the channel and clicker # are already correct, you do not have to enter them again.

Simply press  to retain the current information.

8. A summary screen will appear, and the response pad will power down.

